


Parts List (Station/Iron Holder)


Note: Spare or repair parts do not include mounting screws, if they are not listed on the description. Screws must be ordered separately.

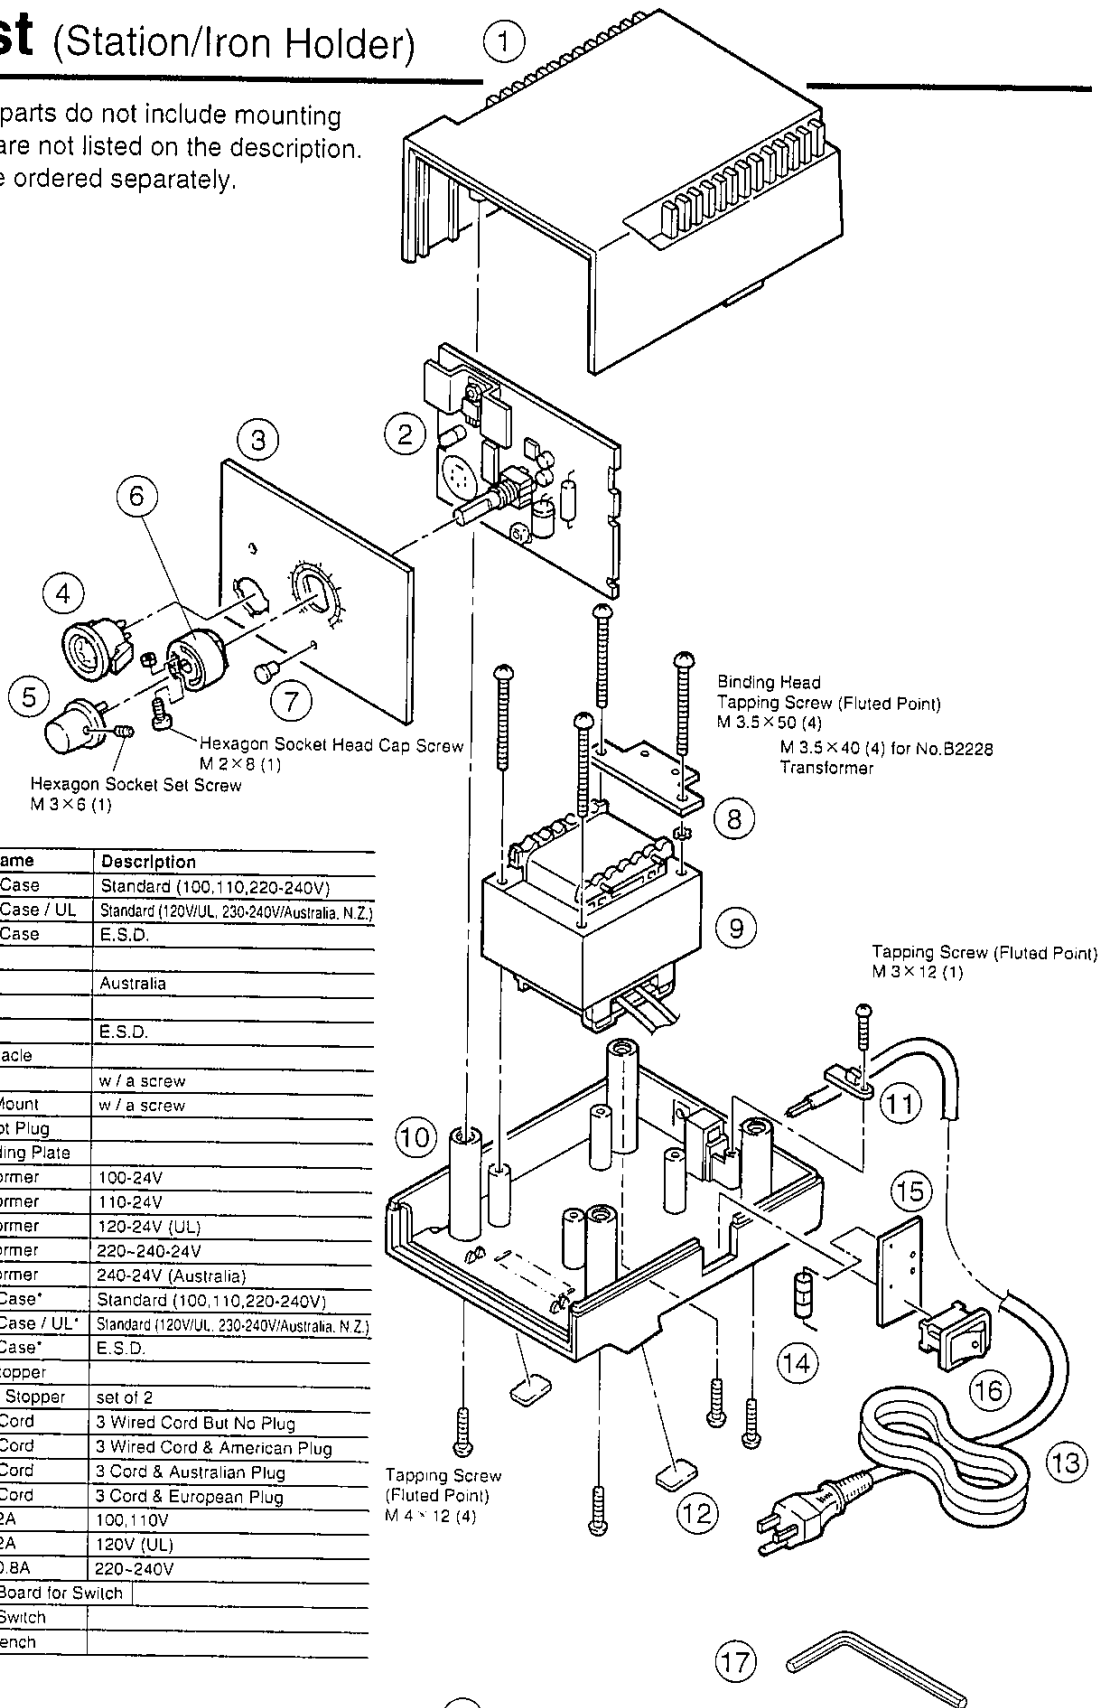

Item No.	Part No.	Part Name	Description
1	B2048	Upper Case	Standard (100,110,220-240V)
	B2225	Upper Case / UL	Standard (120V/UL, 230-240V/Australia, N.Z.)
	B2001	Upper Case	E.S.D.
2	B2229	P.W.B.	
	B2319	P.W.B.	Australia
3	B2003	Panel	
	B2287	Panel	E.S.D.
4	B2006	Receptacle	
5	B2004	Knob	w / a screw
6	B2005	Knob Mount	w / a screw
7	B2018	CAL Pot Plug	
8	B2227	Grounding Plate	
9	B2011	Transformer	100-24V
	B2012	Transformer	110-24V
	B2228	Transformer	120-24V (UL)
	B2014	Transformer	220-240-24V
	B2088	Transformer	240-24V (Australia)
10	B2000	Lower Case*	Standard (100,110,220-240V)
	B2226	Lower Case / UL*	Standard (120V/UL, 230-240V/Australia, N.Z.)
	B2002	Lower Case*	E.S.D.
11	B2015	Cord Stopper	
12	B2016	Rubber Stopper	set of 2
13	B1318	Power Cord	3 Wired Cord But No Plug
	B1319	Power Cord	3 Wired Cord & American Plug
	B2042	Power Cord	3 Cord & Australian Plug
	B2043	Power Cord	3 Cord & European Plug
14	B2007	Fuse / 2A	100,110V
	B2224	Fuse / 2A	120V (UL)
	B2008	Fuse / 0.8A	220-240V
15	B2103	Wiring Board for Switch	
16	B1084	Power Switch	
17	B2017	Hex Wrench	

*w / Rubber Stopper


Item No.	Part No.	Part Name	For
1	C1141	Iron Holder	900S
	C1142	Iron Holder	907,908
2	B2020	Iron Receptacle	900S
	B2021	Iron Receptacle	907,908
3	B2019	Iron Holder Base	900S,907,908
4	A1042	Cleaning Sponge	900S,907,908

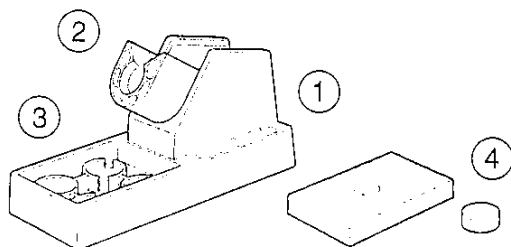

Parts List (Iron)

900S

Item No.	Part No.	Part Name	Description
1	900S-006	Nut	
	900S 006S	Nut	E. S. D.
2		Soldering Tip	See. P.6
3	A1322	Heating Element	Old part No.900S-H
4	900S-101	Terminal Board	w/Cord Stopper
5	900S-001	Handle	w/Handle Cover
	900S-001S	Handle	w/Handle Cover, E. S. D.
6	900S-034	Handle Cover	
	900S-034S	Handle Cover	E. S. D.
7	900S-010	Cord Bushing	(Not shown)
8	900S-039	Cord Asse'y	(Not shown)
	900S-039S	Cord Asse'y	E. S. D. (Not shown)

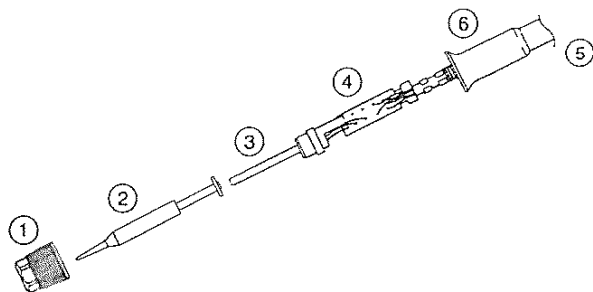

907,908

Item No.	Part No.	Part Name	Description	For
1	B1784	Nut		907
	B1794	Nut		908
2	B1786	Tip Enclosure		907
	B1787	Tip Enclosure		908
3		Soldering Tip	See. P. 6	907
		Soldering Tip	See. P. 6	908
4	B2022	Nipple		907
	B2033	Nipple		908
5	B2032	Grounding Spring		907,908
	A1321	Heating Element	Old part No.900M-H,900L-H	907,908
7	B2028	Terminal Board	w/Cord Stopper	907,908
8	B2023	Handle	w/Handle Cover	907
	B2024	Handle	w/Handle Cover, E. S. D.	907
	B2025	Handle	w/Handle Cover	908
	B2026	Handle	w/Handle Cover, E. S. D.	908
	B2027	Handle Cover		907,908
10	B2031	Cord Bushing		907,908
11	B2029	Cord Asse'y		907,908
	B2030	Cord Asse'y	E. S. D.	907,908

