


PARTS LIST

NOTE:


Spare or repair parts do not include mounting screws, if they are not listed on the description. Screws must be ordered separately.

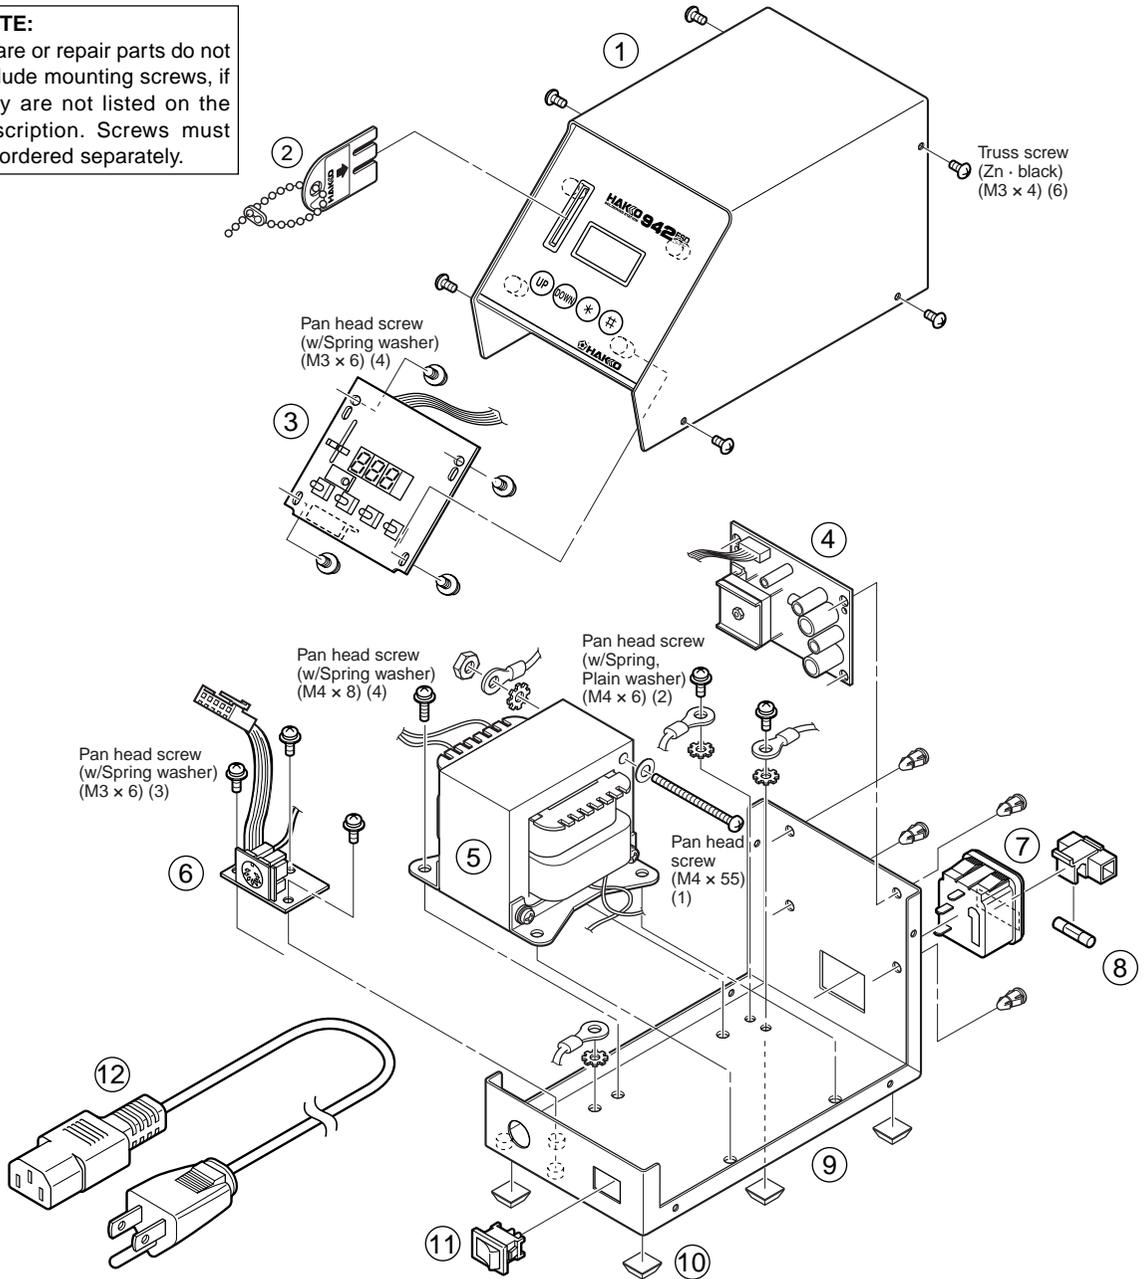

● 942 Station

Item No.	Part No.	Part Name	Description
1	B2579	Cover	With membrane sheet
2	B2388	Control card	
3	B2580	P.W.B. (temperature control)	
4	B2581	P.W.B. (power supply)	
5	B2583	Transformer	120-24V
6	B2582	Connector board	

Item No.	Part No.	Part Name	Description
7	B2666	Power receptacle	
8	B2403	Fuse, 250V-2A	100-120V
9	B2584	Chassis	With rubber feet
10	B2680	Rubber foot	4 ea.
11	B2663	Power switch	
12	B2668	Power cord, 3 core & American plug	

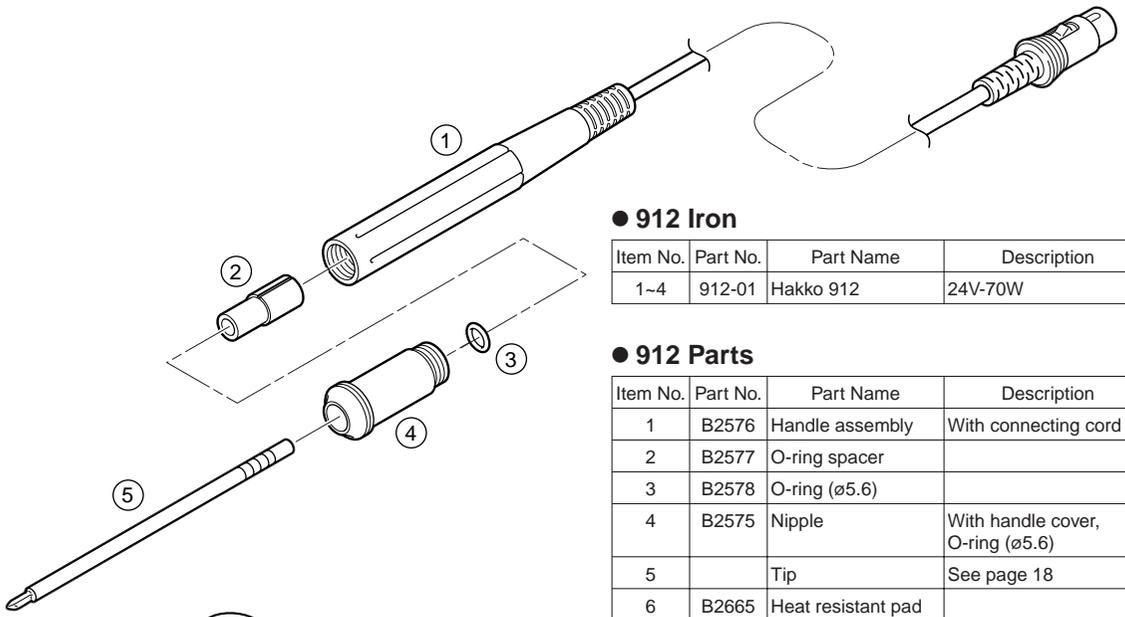


● 912 Iron

Item No.	Part No.	Part Name	Description
1~4	912-01	Hakko 912	24V-70W

● 912 Parts

Item No.	Part No.	Part Name	Description
1	B2576	Handle assembly	With connecting cord
2	B2577	O-ring spacer	
3	B2578	O-ring (ø5.6)	
4	B2575	Nipple	With handle cover, O-ring (ø5.6)
5		Tip	See page 18
6	B2665	Heat resistant pad	

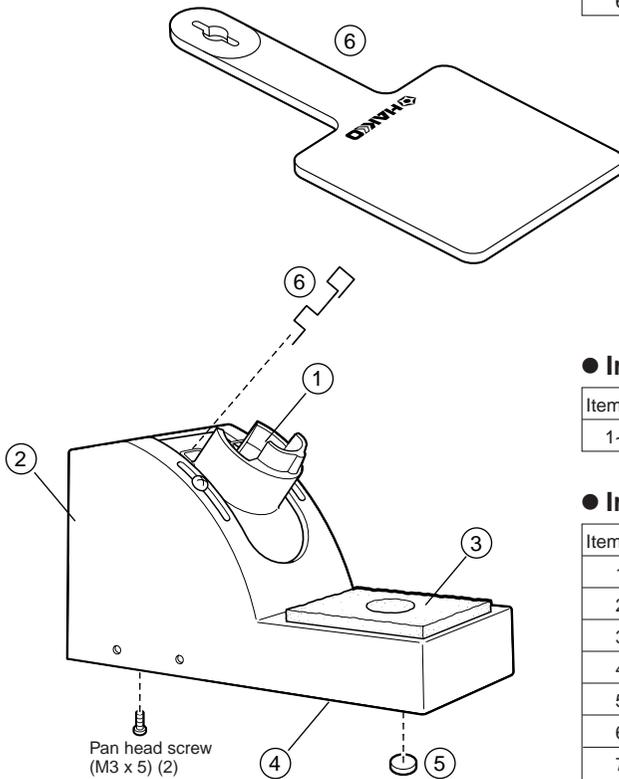

● Iron Holder

Item No.	Part No.	Part Name	Description
1~5	C1413	Iron holder	For HAKKO 911, 912

● Iron Holder Parts

Item No.	Part No.	Part Name	Description
1	B2390	Iron receptacle	With two screws
2	B2389	Iron holder base	(With bottom plate)
3	A1427	Cleaning sponge	
4	B2391	Bottom plate	
5	B2667	Rubber foot	4 ea.
6	B2572	Retaining clip	
7	B2607	Tip tray	

